

 
 


RLL 284-BM1724





RLL 549-BM2637

Dimension



Installation steps

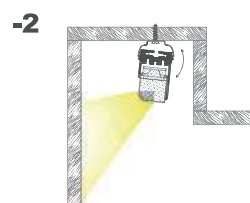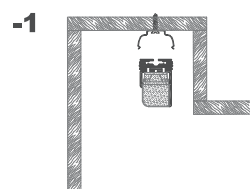

Accessories

