





 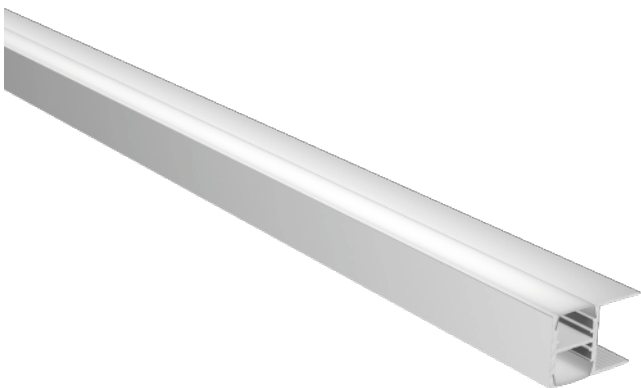


RLL 183-M3020

Dimension

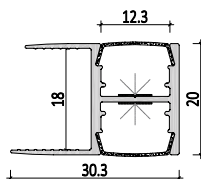

Installation steps

 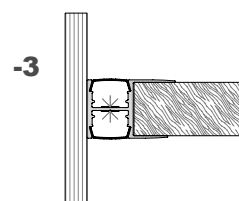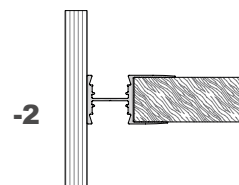


Accessories






RLL 560-Y1909

Dimension



Installation steps

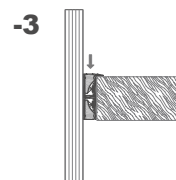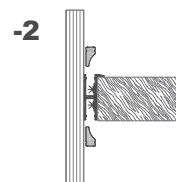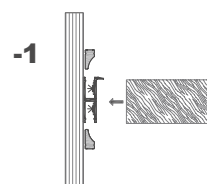

Accessories