





RLL 541-BM30

Dimension

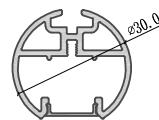

Installation steps

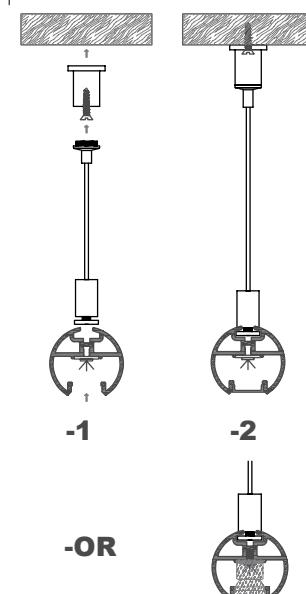

Accessories

